

Supported Ford Vehicles

2001 [2001](#) [2002](#) [2003](#) [2004](#) [2005](#) [2006](#) [2007](#)

Make	Model	Cable	Module Location
Ford	Crown Victoria	02003043	Center tunnel
Ford	Escape	02003274	Center tunnel under IP
Ford	Escort	DLC only	Center tunnel under IP
Ford	Excursion	02003274	Center tunnel under IP
Ford	Expedition	02003274	Center tunnel under IP
Ford	Explorer Sport (2 door)	02003274	Center tunnel under IP
Ford	Explorer Sport Trac (pickup)	02003274	Center tunnel under IP
Ford	F150	02003274	Center tunnel under IP
Ford	F250, F350, F450, F550 Super Duty	DLC only	Center tunnel under IP
Ford	Mustang	02003274	Center tunnel under IP
Ford	Ranger	02003274	Center tunnel under IP
Ford	Taurus	02003043	Center tunnel
Ford	Windstar	02003043	Center tunnel
Lincoln	Continental	02003274	Center tunnel under IP
Lincoln	LS	02003274	Center tunnel between seats
Lincoln	Navigator	02003274	Center tunnel under IP
Lincoln	Town Car	02003043	Center tunnel
Mercury	Grand Marquis	02003043	Center tunnel
Mercury	Sable	02003043	Center tunnel

2002 [2001](#) [2002](#) [2003](#) [2004](#) [2005](#) [2006](#) [2007](#)

Make	Model	Cable	Module Location
Ford	Crown Victoria	02003043	Center tunnel
Ford	Escape	02003274	Center tunnel under IP
Ford	Escort	DLC only	Center tunnel under IP
Ford	Excursion	02003274	Center tunnel under IP
Ford	Expedition	02003274	Center tunnel under IP
Ford	Explorer Sport (2 door)	02003274	Center tunnel under IP

Ford	Explorer Sport Trac (pickup)	02003274	Center tunnel under IP
Ford	F150	02003274	Center tunnel under IP
Ford	F250, F350, F450, F550 Super Duty	02003274	Center tunnel under IP
Ford	Mustang	02003274	Center tunnel under IP
Ford	Ranger	02003274	Center tunnel under IP
Ford	Thunderbird	02003274	Center tunnel between seats
Ford	Windstar	02003043	Center tunnel
Lincoln	Continental	02003274	Center tunnel under IP
Lincoln	LS	02003274	Center tunnel between seats
Lincoln	Navigator	02003274	Center tunnel under IP
Lincoln	Town Car	02003043	Center tunnel
Mercury	Grand Marquis	02003043	Center tunnel

2003 [2001](#) [2002](#) [2003](#) [2004](#) [2005](#) [2006](#) [2007](#)

Make	Model	Module	Cable	Module Location
Ford	Crown Victoria	ACM	02003043	Center tunnel
Ford	Escape	ACM	02003274	Center tunnel under IP
Ford	Excursion	ACM	02003274	Center tunnel under IP
Ford	F150	ACM	02003274	Center tunnel under IP
Ford	F250, F350, F450, F550 Super Duty	ACM	02003274	Center tunnel under IP
Ford	Mustang	ACM	02003274	Center tunnel under IP
Ford	Ranger	ACM	02003274	Center tunnel under IP
Ford	Thunderbird	ACM (see note 4)	02003274	Center tunnel between seats
		PCM (see note 1)	PCM Adapter & F-00K-108-224	Refer to service manual
Ford	Windstar	ACM	02003043	Center tunnel
Lincoln	LS	PCM (see note 1)	PCM Adapter & F-00K-108-224	Refer to service manual
Lincoln	Town Car	ACM	02003043	Center tunnel
Mercury	Grand Marquis	ACM	02003043	Center tunnel
Mercury	Marauder	ACM	02003043	Center tunnel

2004[2001](#) [2002](#) [2003](#) [2004](#) [2005](#) [2006](#) [2007](#)

Make	Model	Module	Cable	Module Location
Ford	Crown Victoria	ACM	02003043	Center tunnel
Ford	Escape	ACM	02003274	Center tunnel under IP
Ford	Excursion	ACM	02003274	Center tunnel under IP
Ford	Explorer	PCM	PCM Adapter & F-00K-108-222	Pass Cowl Low
Ford	F150 (Heritage)	ACM	02003274	Center tunnel under IP
Ford	F150 (except Heritage)	PCM (see note 1 & 3)	PCM Adapter & F-00K-108-223	Pass Cowl Low
Ford	F250, F350, F450, F550 Super Duty	ACM	02003274	Center tunnel under IP
Ford	Mustang	ACM	02003274	Center tunnel under IP
Ford	Ranger	ACM	02003274	Center tunnel under IP
Ford	Thunderbird	ACM (see note 4)	02003274	Center tunnel between seats
		PCM (see note 1)	PCM Adapter & F-00K-108-224	Pass Cowl Low
Lincoln	LS	PCM (see note 1)	PCM Adapter & F-00K-108-224	Pass Cowl Low
Lincoln	Town Car	ACM	02003043	Center tunnel
Mercury	Grand Marquis	ACM	02003043	Center tunnel
Mercury	Marauder	ACM	02003043	Center tunnel
Mercury	Mountaineer	PCM	PCM Adapter & F-00K-108-222	Pass Cowl Low

2005[2001](#) [2002](#) [2003](#) [2004](#) [2005](#) [2006](#) [2007](#)

Make	Model	Module	Cable	Module Location
Ford	500	PCM (see note 6)	PCM Adapter & F-00K-108-222	Pass Cowl
Ford	Crown Victoria	ACM (see notes 4 & 5)	F-00K-108-225	Center tunnel
		PCM	PCM Adapter & F-00K-108-222	Driver Shock Tower
Ford	Econoline	PCM (see note 7)	PCM Adapter & F-00K-108-222	Driver Cowl

Ford	Excursion	ACM	02003274	Center tunnel under IP
Ford	Expedition	PCM	PCM Adapter & F-00K-108-223	Pass Cowl
Ford	Explorer	PCM	PCM Adapter & F-00K-108-222	Pass Cowl Low
Ford	F150	PCM	PCM Adapter & F-00K-108-223	Pass Cowl Low
Ford	F250, F350, F450, F550 Super Duty	ACM (see note 4)	02003274	Center tunnel under IP
		PCM (see note 7)	PCM Adapter & F-00K-108-222	Pass Cowl
Ford	Freestyle	PCM	PCM Adapter & F-00K-108-222	Pass Cowl
Ford	Mustang	PCM	PCM Adapter & F-00K-108-222	Pass Rad Support
Ford	Ranger	ACM	02003274	Center tunnel under IP
Ford	Thunderbird	ACM (see note 4)	02003274	Center tunnel between seats
		PCM (see note 1)	PCM Adapter & F-00K-108-224	Pass Cowl Low
Lincoln	LS	PCM (see note 1)	PCM Adapter & F-00K-108-224	Pass Cowl Low
Lincoln	Navigator	PCM	PCM Adapter & F-00K-108-223	Pass Cowl
Lincoln	Town Car	ACM (see notes 4 & 5)	F-00K-108-225	Center tunnel
		PCM	PCM Adapter & F-00K-108-222	Refer to service manual
Mercury	Grand Marquis	ACM (see notes 4 & 5)	F-00K-108-225	Center tunnel
		PCM	PCM Adapter & F-00K-108-222	Driver Shock Tower
Mercury	Montego	PCM	PCM Adapter & F-00K-108-222	Pass Cowl
Mercury	Mountaineer	PCM	PCM Adapter & F-00K-108-222	Pass Cowl Low

2006 [2001](#) [2002](#) [2003](#) [2004](#) [2005](#) [2006](#) [2007](#)

Make	Model	Module	Cable	Module Location
Ford	500	PCM (see note 6)	PCM Adapter & F-00K-108-222	Pass Cowl

Ford	Crown Victoria	ACM (see notes 4 & 5)	F-00K-108-225	Center tunnel
		PCM	PCM Adapter & F-00K-108-222	Driver Shock Tower
Ford	Econoline	PCM (see note 7)	PCM Adapter & F-00K-108-222	Driver Cowl
Ford	Expedition	PCM	PCM Adapter & F-00K-108-223	Pass Cowl
Ford	Explorer	PCM	PCM Adapter & F-00K-108-222	Pass Cowl Low
Ford	F150	PCM	PCM Adapter & F-00K-108-223	Pass Cowl Low
Ford	F250, F350, F450, F550 Super Duty	ACM (see note 4)	02003274	Center tunnel under IP
		PCM (see note 7)	PCM Adapter & F-00K-108-222	Pass Cowl
Ford	Freestyle	PCM	PCM Adapter & F-00K-108-222	Pass Cowl
Ford	Fusion	PCM	PCM Adapter & F-00K-108-223	Driver Shock Tower
Ford	Mustang	PCM	PCM Adapter & F-00K-108-222	Pass Rad Support
Ford	Ranger	ACM	02003274	Center tunnel under IP
Lincoln	LS	PCM (see note 1)	PCM Adapter & F-00K-108-224	Pass Cowl Low
Lincoln	Mark LT	PCM	PCM Adapter & F-00K-108-223	Refer to service manual
Lincoln	Navigator	PCM	PCM Adapter & F-00K-108-223	Pass Cowl
Lincoln	Town Car	ACM (see notes 4 & 5)	F-00K-108-225	Center tunnel
		PCM	PCM Adapter & F-00K-108-222	Refer to service manual
Lincoln	Zephyr	PCM	PCM Adapter & F-00K-108-223	Driver Shock Tower
Mercury	Grand Marquis	ACM (see notes 4 & 5)	F-00K-108-225	Center tunnel
		PCM	PCM Adapter & F-00K-108-222	Driver Shock Tower
Mercury	Milan	PCM	PCM Adapter & F-00K-108-223	Driver Shock Tower
Mercury	Montego	PCM	PCM Adapter & F-00K-108-222	Pass Cowl
Mercury	Mountaineer	PCM	PCM Adapter &	Pass Cowl Low

F-00K-108-222

2007 **2001** **2002** **2003** **2004** **2005** **2006** **2007**

Make	Model	Module	Cable	Module Location
Ford	500	PCM	PCM Adapter & F-00K-108-222	Pass Cowl
Ford	Crown Victoria	ACM (see notes 4 & 5)	<u>F-00K-108-225</u>	Center tunnel
		PCM	PCM Adapter & F-00K-108-222	Driver Shock Tower
Ford	Econoline	PCM (see note 7)	PCM Adapter & F-00K-108-222	Driver Cowl
Ford	Edge	PCM	PCM Adapter & F-00K-108-223	Pass over engine
Ford	Expedition	PCM (see note 2)	PCM Adapter & F-00K-108-223	Pass Cowl
Ford	Explorer - including Sport Trac	PCM	PCM Adapter & F-00K-108-222	Pass Cowl Low
Ford	F150	PCM	PCM Adapter & F-00K-108-223	Pass Cowl Low
Ford	F250, F350, F450, F550 Super Duty	PCM (see note 7)	PCM Adapter & F-00K-108-222	Pass Cowl
Ford	Freestyle	PCM	PCM Adapter & F-00K-108-222	Pass Cowl
Ford	Fusion	PCM	PCM Adapter & F-00K-108-223	Driver Shock Tower
Ford	Mustang	PCM	PCM Adapter & F-00K-108-222	Pass Rad Support
Lincoln	MKX	PCM	PCM Adapter & F-00K-108-223	Pass over engine
Lincoln	MKZ	PCM	PCM Adapter & F-00K-108-223	Refer to service manual
Lincoln	Navigator	PCM (see note 2)	PCM Adapter & F-00K-108-223	Pass Cowl
Lincoln	Town Car	ACM (see notes 4 & 5)	<u>F-00K-108-225</u>	Center tunnel
		PCM	PCM Adapter & F-00K-108-222	Refer to service manual
Mercury	Grand Marquis	ACM (see notes 4 & 5)	<u>F-00K-108-225</u>	Center tunnel
		PCM	PCM Adapter & F-00K-108-222	Driver Shock Tower

Mercury	Milan	PCM	PCM Adapter & F-00K-108-223	Driver Shock Tower
Mercury	Montego	PCM	PCM Adapter & F-00K-108-222	Pass Cowl
Mercury	Mountaineer	PCM	PCM Adapter & F-00K-108-222	Pass Cowl Low

1. This vehicle is equipped with Motorola PCMs that store 32K bytes of data which is 16 times more than other PCMs. Downloads for these PCMs can take up to 8 minutes to complete all 3 passes of the download.
2. This vehicle may be equipped with a Bosch or Motorola (Continental) PCM. The Bosch PCMs are currently not supported by the CDR tool. You may be able to verify the PCM's manufacturer by looking at its serial/part number label.
3. Heritage F150 series trucks are not equipped with PCMs that store crash data therefore the CDR tool will not retrieve data from these vehicles. Only 2004 F150 series with the following VIN information are supported:
- First 3 digits of the VIN must be either "1FD" or "1Ft" combined with one of the following 5-7 VIN digits: "F02", "F04", "F12", "F14", "W02", "W04", "W12", "W14", "X02", "X04", "X12", "X14"
4. To avoid spoliation of crash data stored in Ford PCMs, you must either perform a direct download from the ACM using the listed cable or use the Ford PCM Interface Adapter when performing an ACM download through the DCL cable. Refer to [PCM/RCM data collection instructions](#) in this help file before you begin collecting ACM data.
5. Downloading data from these ACMs can take up to 3 minutes per pass and 9 minutes for a complete download.
6. This vehicle may only store 12.5 seconds of data.
7. Gasoline engines only. Diesel engine (8th digit of VIN = P) is not supported.

HELP TIP: Use the help system's "Back" button to easily return to your place in the vehicle list.